



HAND BLENDER INSTRUCTION MANUAL



Model No.: HB972A00

IMPORTANT SAFETY INSTRUCTIONS

FOR HOUSEHOLD USE ONLY

Read carefully before use and retain this manual for reference.

- Before you connect the appliance to the mains supply, ensure your home's circuitry supports **120-240V** appliances. Otherwise, contact your dealer and do not use the appliance.
- This appliance is not intended for use by children under the age of eight, persons with reduced physical, sensory or mental capabilities, or those lacking experience except under the direct supervision of a capable guardian.
- The appliance is not a toy. Keep the appliance and its cord out of reach of children under 8 years of age.
- The appliance is not intended for operation through external remote-control systems. **NEVER** use an unauthorized attachment.
- Take special care when preparing food for babies, the elderly and infirm. Ensure the appliance shaft is thoroughly sterilized using a solution in accordance with the manufacturer instructions.
- Switch off the appliance and disconnect from the power supply before approaching parts that move in use.
- Keep fingers, hair, clothing and utensils away from moving parts.
- Take care when handling the **SHARP CUTTING BLADES**, emptying the bowl and during cleaning (pg5).
- Unplug after use.

Always disconnect the appliance from the mains if:

- the appliance is left unattended
- before moving the appliance
- before adding food



NEVER use a damaged appliance. If the supply cord is damaged, it must be replaced by the manufacturer, the service agent, or a similarly qualified professional to avoid hazards.




NEVER immerse the power handle in water or let the cord or plug get wet. This may cause electric shock.

TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	2
FOR HOUSEHOLD USE ONLY	2
KNOW YOUR APPLIANCE	4
PURPOSE	5
CARE AND CLEANING	5
TECHNITIAN REPAIR GUIDE	6
DISPOSAL INFORMATION	7
PRODUCT GUARANTEE	7



KNOW YOUR APPLIANCE

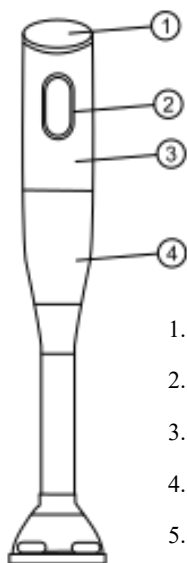

1. top cover
2. switch button
3. handle
4. blender shaft

Instructions:

1. Clean the blender shaft.
2. Ensure the power cord is not damaged.
3. Verify that your electricity supply is **120-240V**.
4. Fill the container with food intended for blending.
5. Plug in your appliance.
6. Hold the power handle steady.
7. Power on your appliance by pressing the switch button.
8. Immerse the blade guard completely in the ingredients.
9. Slowly move your appliance up, down, and in circles to blend.



After blending is complete, release the switch button, then unplug from the outlet.

WARNING:

- The continuous operating time must be less than 60 seconds.
- NEVER blend hot oil, fat or meat.
- If your blender is blocked, switch off the power and unplug it before clearing.

Please refer to the instructions in the “**CARE AND CLEANING**” section of this manual (pg. 5).

PURPOSE

The Hand Blender is designed for the following applications:

- Blending fluids like dairy products, sauces, fruit juices, soups, mixed drinks and shakes.
- Mixing soft ingredients, such as pancake batter or mayonnaise.
- Pureeing cooked ingredients under 15 millimetres squared, for example, while making baby food.

PROCESSING GUIDE

Application	Approx. time *	Weight
Fluids	15-30 seconds	200g
Batters and Sauces	15-60 seconds	200g
Purees	15-30 seconds	Up to 200g in 300g of liquid

*Processing times are approximate. Actual usage may vary by food quality and size.



CAUTION: To ensure the long life of your machine, do not use your appliance for longer than 60 seconds in any four-minute period.

CARE AND CLEANING

- **ALWAYS** switch off and unplug the appliance before cleaning.
- **NEVER** immerse the power hand into water as this will result in electric shock.
- Wipe the handle with a damp cloth, then dry.
- **NEVER** use abrasive cleaning agents.
- **NEVER** touch the sharp blades.

TECHNITIAN REPAIR GUIDE

For your own safety, read the instructions carefully before connecting this appliance to the mains.

The Hand Blender is intended for use in homes outfitted with 220-240V circuits. Connecting the appliance to other power sources may damage the appliance. If this is not the case, consult your dealer and do not use.

- To change the fuse in a non-rewirable plug, the cover must be refitted.
- If the fuse cover is lost or damaged, the plug must not be used until a replacement is obtained from the appliance manufacturer.
- If the plug is changed because it is not suitable for the owner's socket, or it has been damaged, it should be cut off and refitted following the wiring instructions.
- The original plug must be safely disposed of as an accidental insertion into a mains socket is an electrical hazard.
- When not in use, disconnect this appliance from the mains.
- Do not expose this appliance to rain or moisture.

If in doubt, **contact a qualified electrician.**




CAUTION

The wires in the mains lead are coloured in accordance with the following code:

BLUE = NEUTRAL

BROWN = LIVE

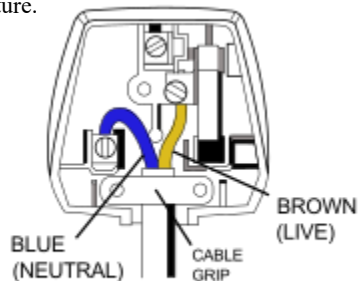

To prevent electric shock, disconnect the appliance from the mains before removing the cover.

- Connect the **blue** wire to the **black** terminal marked with the letter **N**.
- Connect the **brown** wire to the **red** terminal marked with the letter **L**.
- No connection is to be made to the earth terminal of the plug.
- If a 13 Amp (**BS1363**) fused plug is used, it must be fitted with an **ASTA** approved **3A** fuse conforming to **BS1362**.

DISPOSAL INFORMATION

Do not dispose of this appliance with household waste in the EU. Please use the return and collection systems or contact the appliance retailer for environmentally safe recycling options.



PRODUCT GUARANTEE


The Hand Blender is guaranteed against manufacturing defects for a period of 1 year from the date of original purchase. Any defect due to faulty materials or workmanship will result in the replacement, refund or repair of your appliance by the retailer.

This guarantee is subject to the following provisions:

- Argos will not cover accidental damage due to misuse of the Hand Blender.
- The Hand Blender must be operated in accordance with the instructions in this manual. A replacement copy of this instruction manual is available at www.argos-support.co.uk.
- The Hand Blender is solely intended for household applications.
- The guarantee will be invalidated if the Hand Blender is re-sold or damaged by inexperienced repair.
- The specifications of this guarantee are subject to change without notice.
- The guarantee is in addition to and does not diminish your legal rights.



Guarantor: Argos Ltd.
www.argos-support.co.uk
489 — 499 Avebury
Boulevard
Central Milton Keynes
MK9 2NW, SMPLE

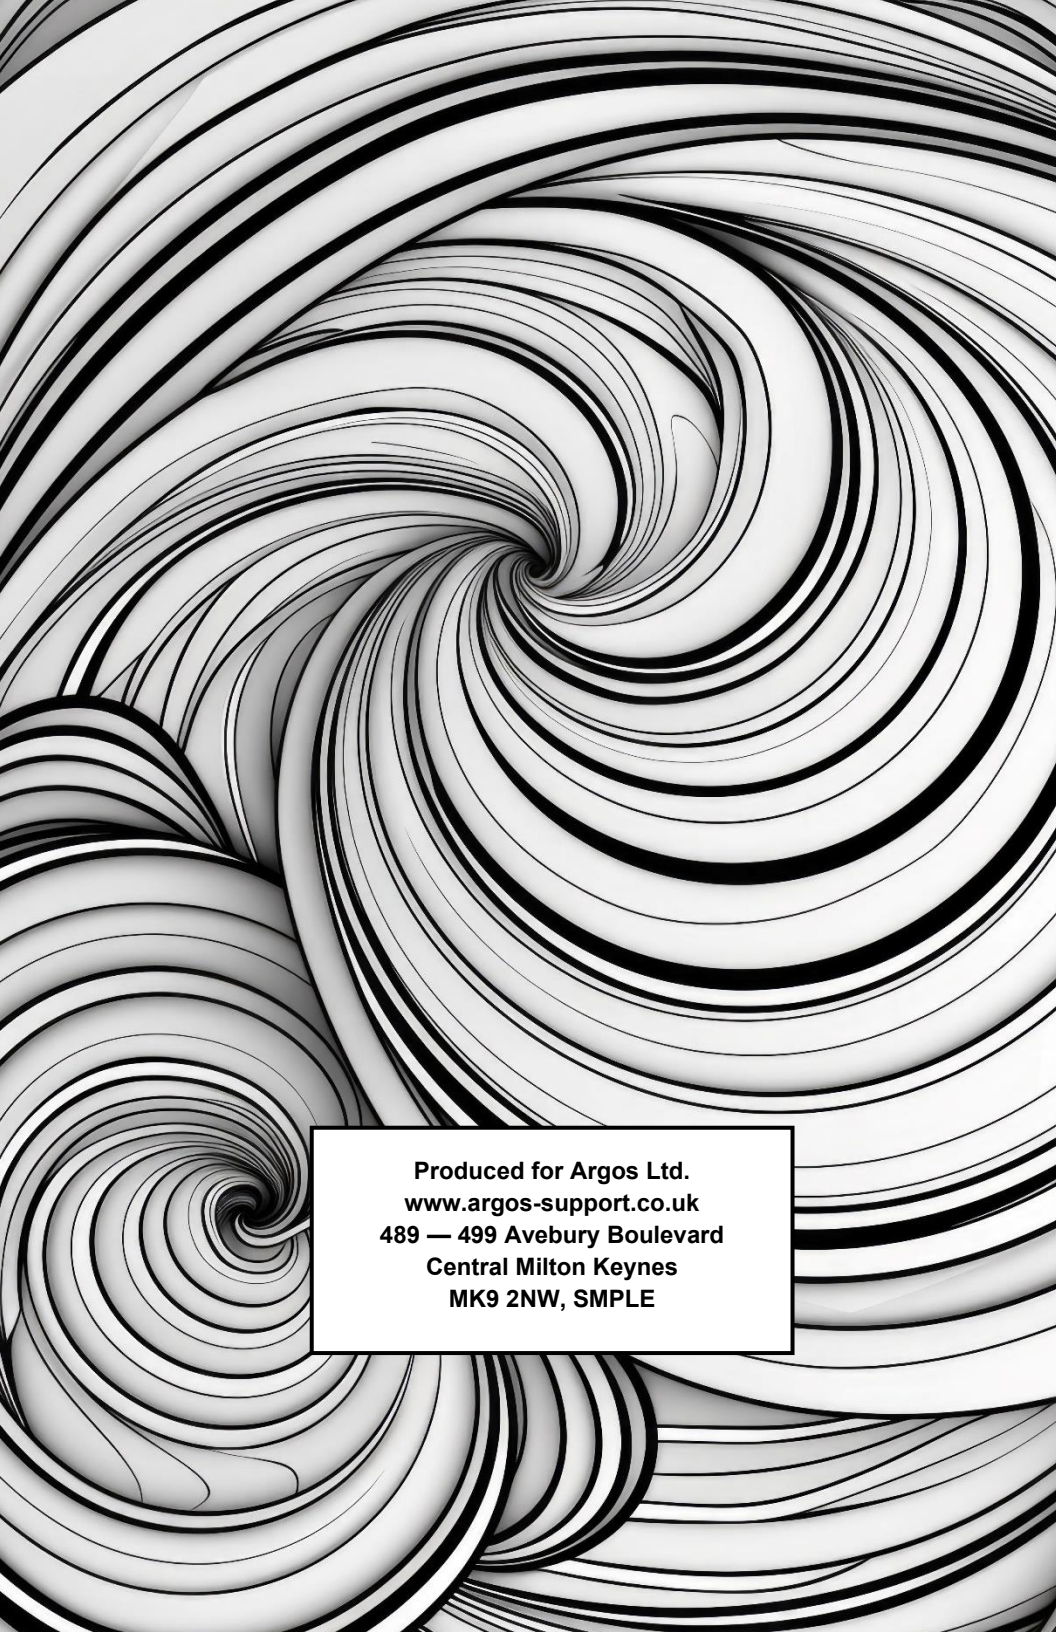The background of the entire page is a complex, abstract pattern of swirling black and white lines. These lines form a series of concentric, overlapping spirals that create a sense of depth and movement, resembling a stylized, high-contrast version of a wood grain or a liquid vortex. The lines vary in thickness and curvature, contributing to a dynamic and visually engaging texture.

**Produced for Argos Ltd.
www.argos-support.co.uk
489 — 499 Avebury Boulevard
Central Milton Keynes
MK9 2NW, SMPLE**